

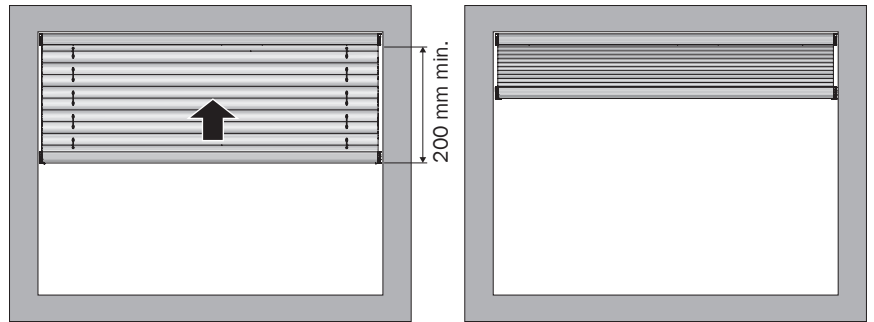
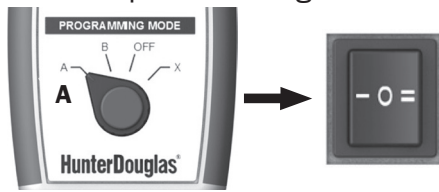


### ① A = Top limit setting

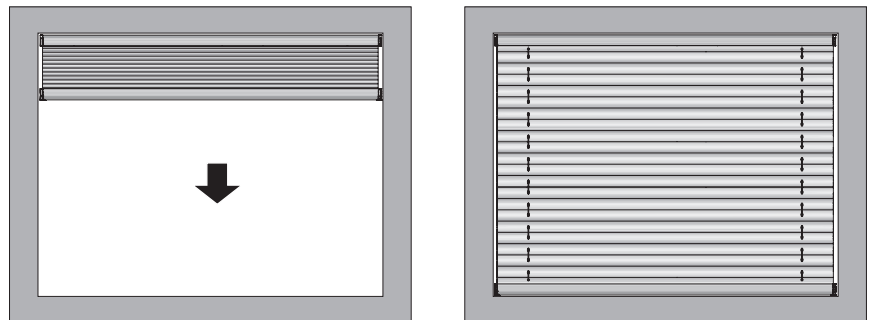


Blind must be down at least 200 mm before setting top limit.  
Press I or II and hold until the blind stops by itself.

### ② B = Bottom limit setting

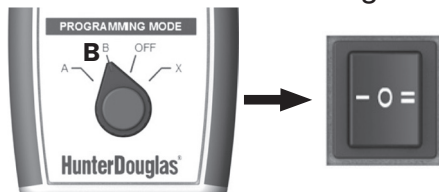



Press II or I until desired bottom limit is reached.

### ③ X = Roofblind setting

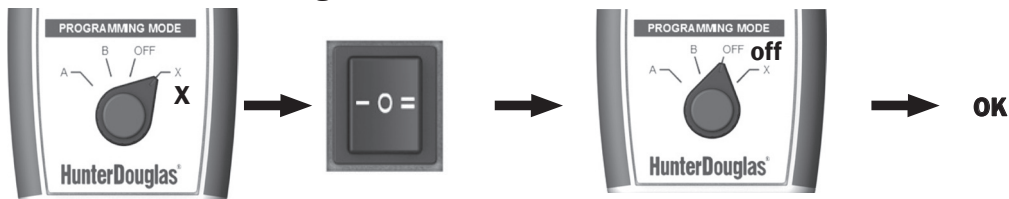



With blind in bottom position, press I or II for 1 second **IMPORTANT; Release button after 1 second**

### ④ Off = Normal operation

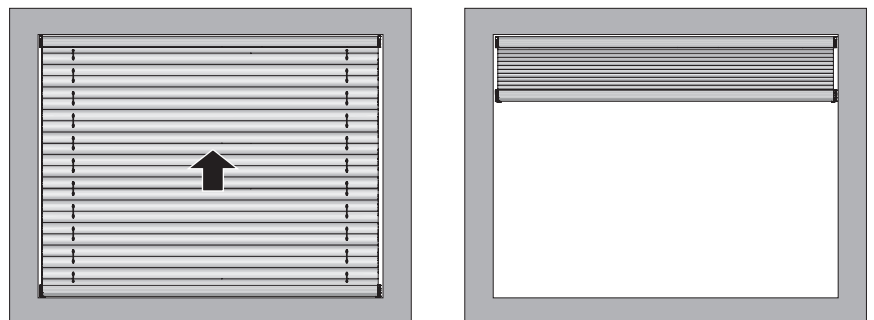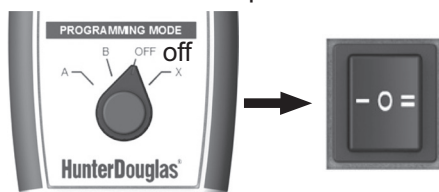



Press and hold I or II until the blind stops by itself in top position.

### X = Factory reset

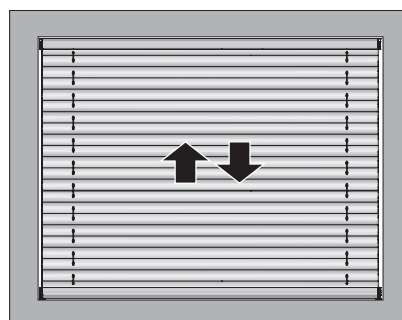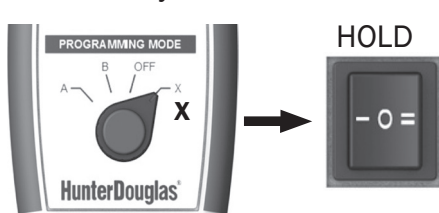



Press and hold I or II until the blind moves (for 5 seconds)

### ① A = Top limit setting

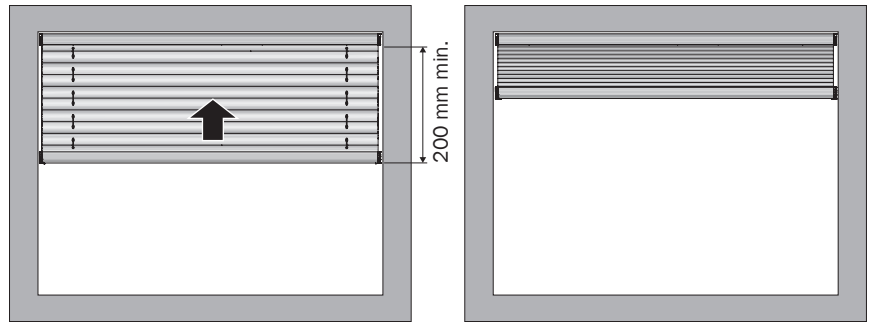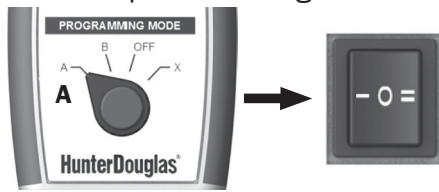



Blind must be down at least 200 mm before setting top limit.  
Press I or II and hold until the blind stops by itself.

### ② B = Bottom limit setting

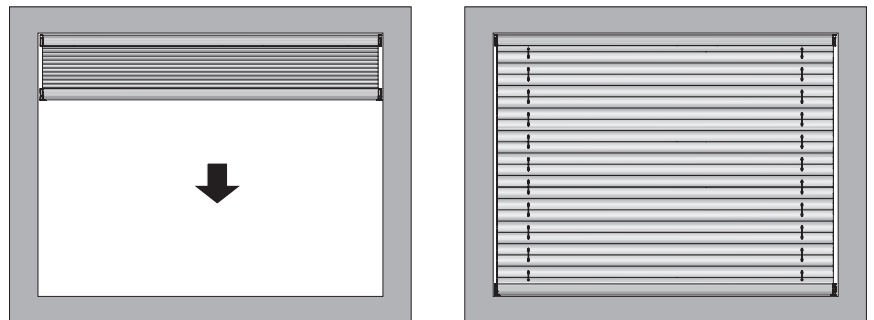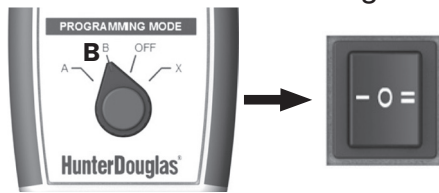



Press II or I until desired bottom limit is reached.

### ④ Off = Normal operation

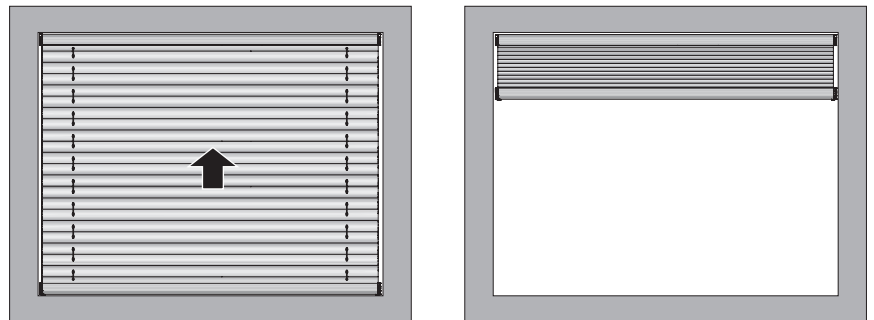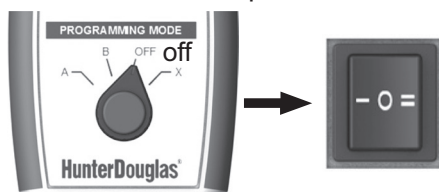

Press and hold I or II until the blind stops by itself in top position.

### X = Factory reset

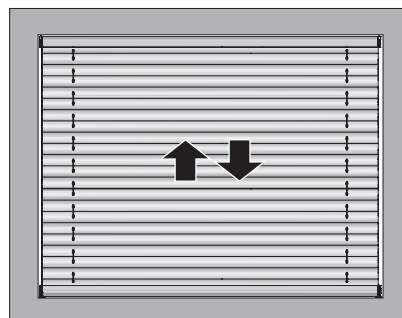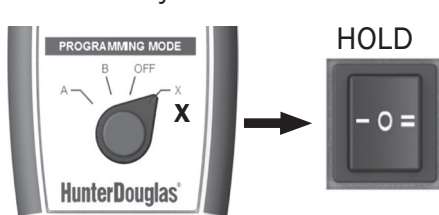

Press and hold I or II until the blind moves (for 5 seconds)