



Unpack and check blind

1. Remove BIGSHADE from packaging, taking care not to scratch the paintwork,
2. Pull the blind out to check that the spring is correctly tensioned and that it has not been damaged in transit.


3. The mounting surface should be flat. Put the blind in position, open the mounting plates to 90° and mark the position of the fixing holes. Do not force the plates further than 90° as it will cause the moulding to splay out and the cover will not fit correctly.

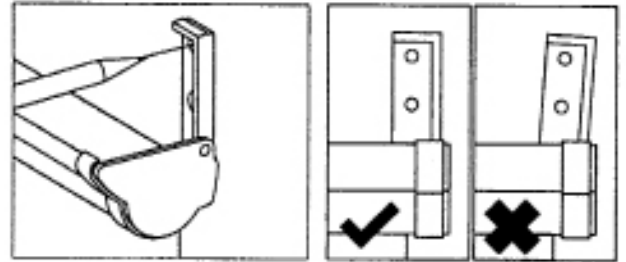


4. Fit using the screws provided.

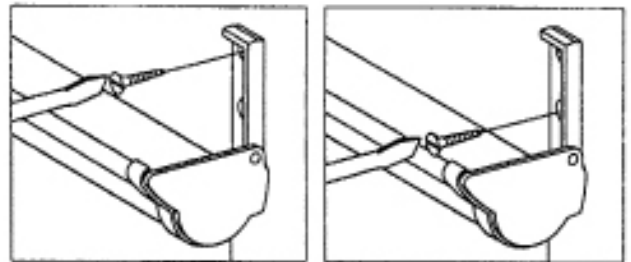


5. Rotate the aluminium cassette up and clip it firmly into place. There is an initial easy click and then a more positive second click. You must make sure that the cassette is properly snapped into place or the cassette might come open in use.

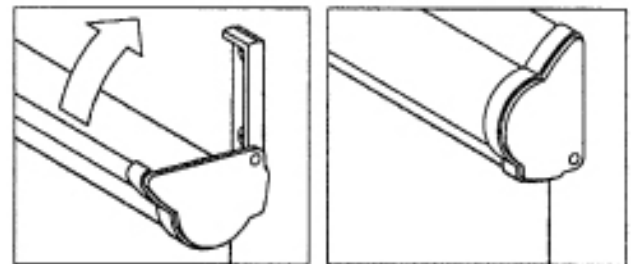

6. In some cases (with larger or longer blinds) we suggest that additional screws are used to lock the cassette in place. Drill a 4.0 mm hole 25 mm in from each end and use a Pan head No 6 Screw.

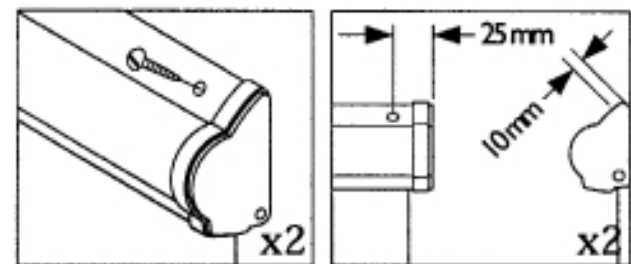

7. Pull the blind down then mark and fit the locking pegs. Take care to fit the screw caps the right way round (There is a cross on the inside) as they are difficult to remove.

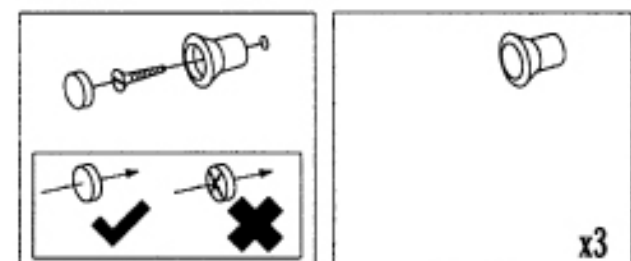

Warning:

BIGSHADE is manufactured to suit the specified blind drop (see label on back of product for exact measurement). The Warranty will be invalidated if the blind is installed with the locking pegs exceeding this dimension.