


VB-RB Fitting Instructions

FACE FIX

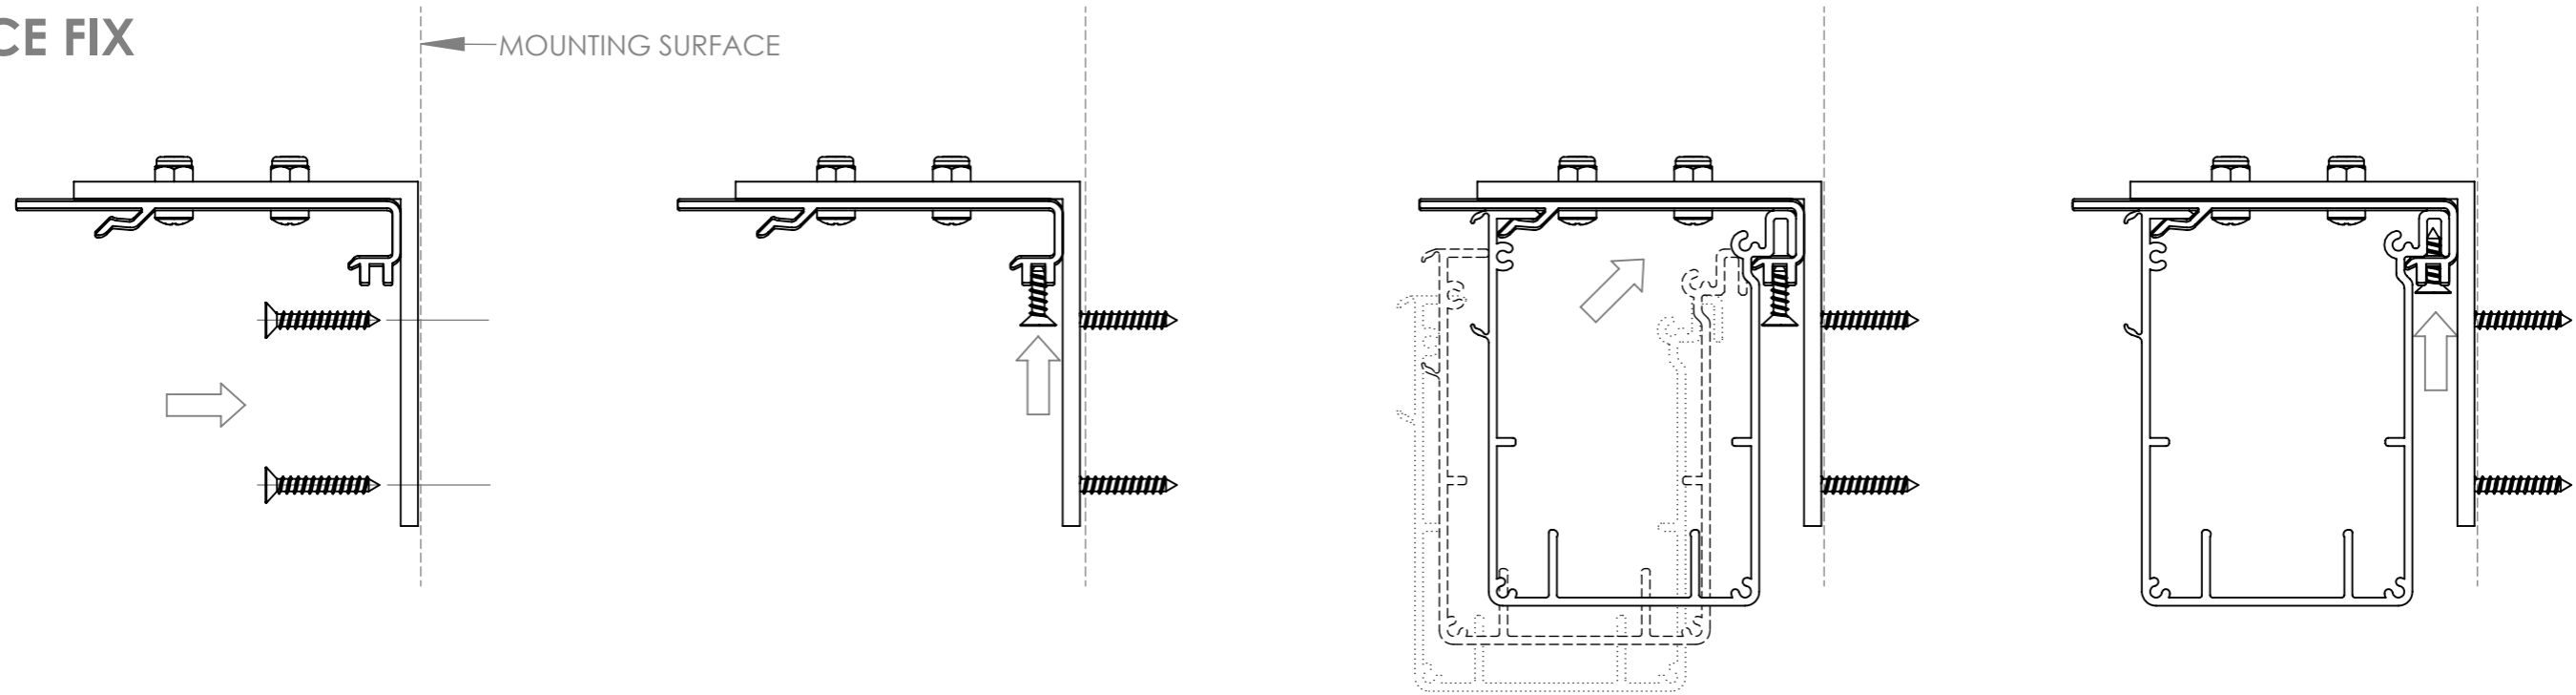


1 MOUNT THE BRACKET USING THE FRONT OR BACK EDGE TO LINE UP THE BRACKETS.

2 FIT, BUT DO NOT TIGHTEN RETAINING SCREW (MAKE SURE TIP DOES NOT PROTRUDE INTO LOCATION FEATURE)

3 LOCATE HEADRAIL IN BRACKET

4 TIGHTEN RETAINING SCREW (DO NOT OVER TIGHTEN)

TOP FIX

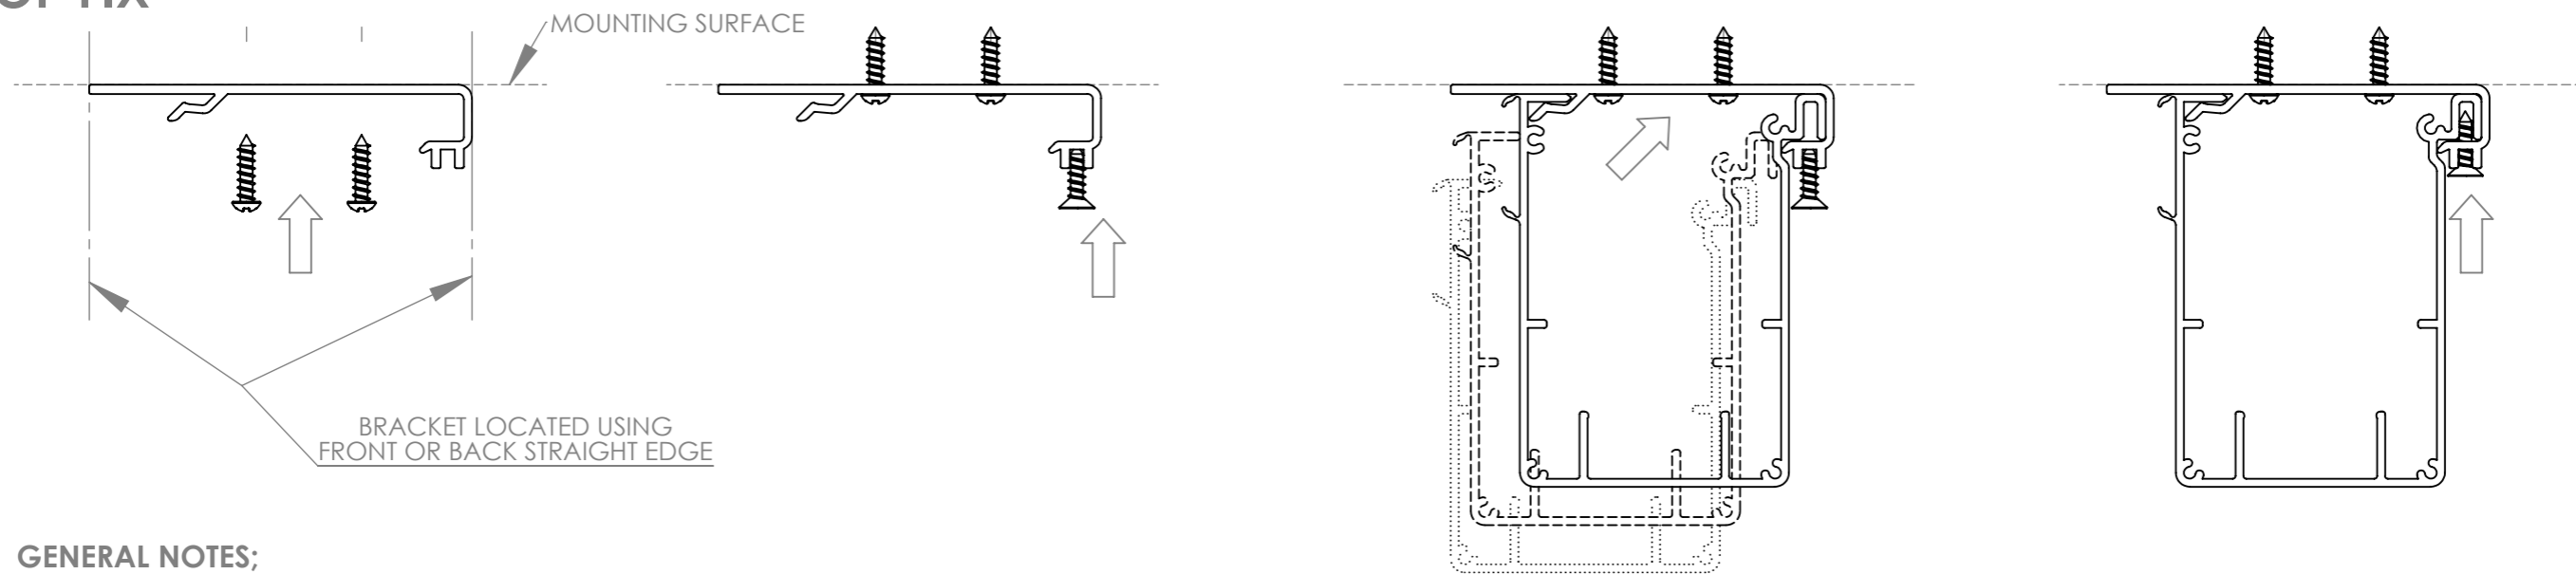

GENERAL NOTES;

- GREEN STICKERS ON HEADRAIL ARE ADVISED BRACKET LOCATIONS
- TO ENGAGE BRACKETS MUST BE ALIGNED