


 **DOMETIC**

**SKYSOL**

Frame  
Assembly Instructions

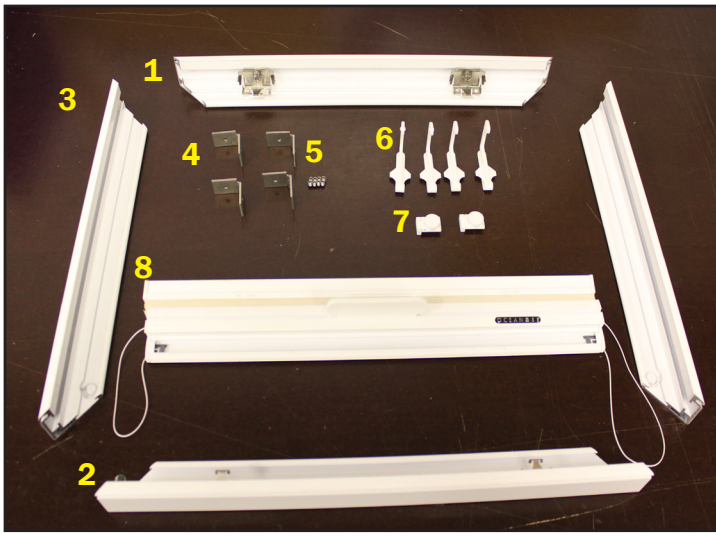


### Contents

1. Frame section (with factory fitted headrail brackets)
2. Frame section (with factory fitted fix-rail brackets)
3. Frame side sections (2 off)
4. Corner brackets (4 off)
5. Grub screws (8 off)
6. Mitre corners (4 off)
7. Gliders (2 off)
8. Blind or Fly Assembly

**Note:** If headrail and fix-rail brackets are not factory fitted, they require screwing into place 63mm in from the end of the frame. For larger frames that require multiple brackets, the brackets need to be evenly spaced along the frame.

Tools required: 2mm Allen Key

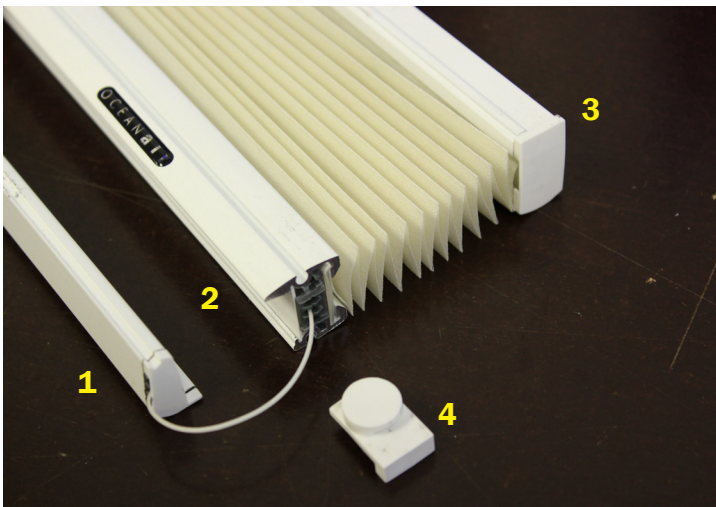


### Blind / Fly assembly main components


1. Fix-rail
2. Moving rail
3. Headrail
4. Glider




**2**  
Pre load grub screws in to brackets.

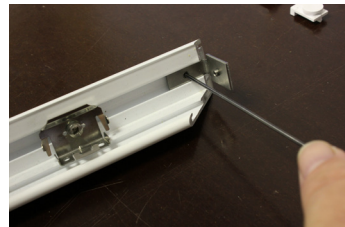


**3**  
Insert corner bracket on to frame section with headrail brackets, do not fully tighten.

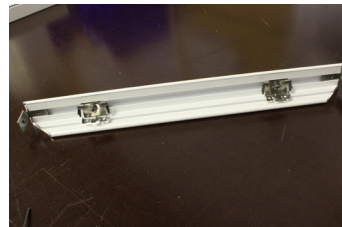


**4**  
Repeat on opposite end.

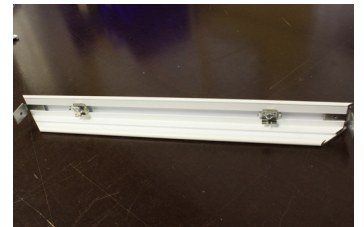


**5**  
Repeat on frame with fix-rail brackets.

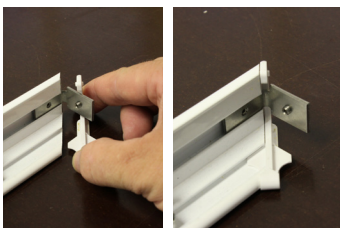


**6**  
Using frame section with headrail brackets, line up and insert mitre corner.

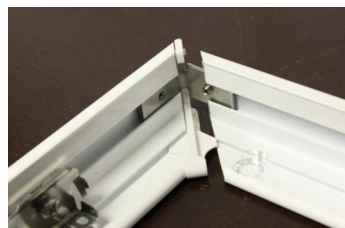

**7**  
Insert side frame section, do not fully tighten.

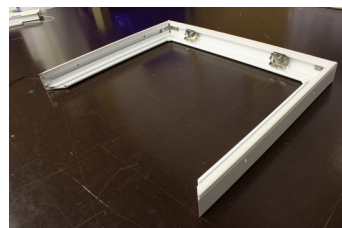


**8**  
Repeat on other side.


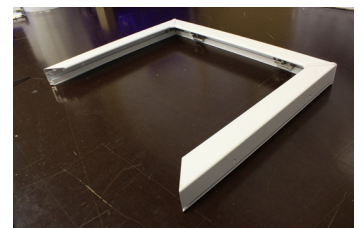


**9**  
Turn frame over.



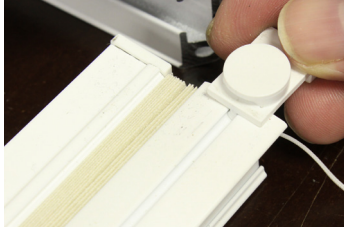


**10**  
Insert gliders on to each end of the moving rail.

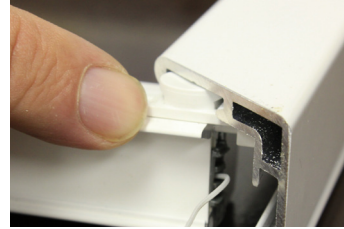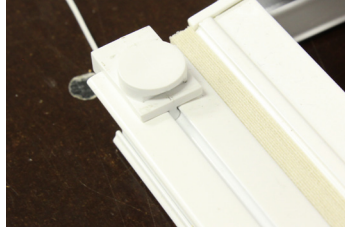

**11**  
Slide gliders into channel in side frame.




**12**  
Repeat on other side.

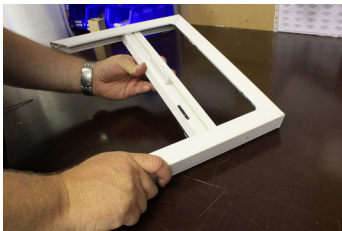


**13**  
Hold blind assembly secure.



**14**  
Turn frame over.

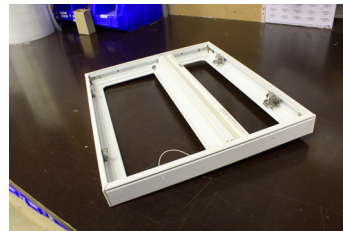


**15**  
Repeat steps 6 to 8 to fit opposite frame section and tighten all corner brackets ensuring frame is square.

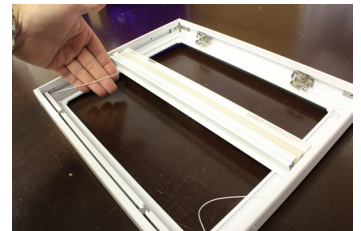

**16**  
Retract fix-rail from blind assembly ensuring cords are not trapped.



**17**  
To fit fix-rail to frame, first pinch fix-rail and frame together as shown.

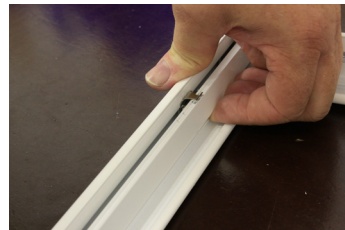

**18**  
Then pull fix-rail up until it clicks into place.



**19**  
Turn frame round to prepare to fit headrail.



**20**  
Pull headrail towards frame in doing so the cords will begin to tension.



**21**  
Whilst under tension, place headrail over the brackets.



**22**  
Then press the back edge of headrail until it clicks into place.



**23**  
Test blind by deploying and stowing two or three times to ensure blind operates correctly.





**Dometic UK Blind Systems Ltd**

Atlantic House, 1 Ellis Square, Selsey, Chichester PO20 0AY United Kingdom.

Tel: +44 1243 606909 Fax: +44 1243 608300 [www.dometic.com](http://www.dometic.com)

**Registered Office**

Atlantic House, 1 Ellis Square, Selsey, Chichester PO20 0AY  
Registered in England No. 2504633